

Notice française - Mercedes-Benz Arocs 6x4

Camion benne radiocommandé AMEWI • références 22504 et 22533

Traduction de la notice anglaise. Les six panneaux illustrés d'origine figurent à la fin du document.

Caractéristiques

- Dimensions approximatives : 450 × 147 × 187 mm ; poids : environ 3 212 g.
- Batteries du camion : 2 × 7,4 V / 2 000 mAh avec connecteur XT30, selon les caractéristiques imprimées sur la couverture. Piles de la radiocommande : 4 × AA, non fournies.
- Autonomie annoncée : environ 30 minutes ; portée : environ 100 m ; radiocommande : 10 voies.
- Fonctions : marche avant/arrière, virage à gauche/droite et basculement de la benne. Charge de déchargement indiquée : 3,5 kg.

Installer la batterie dans le camion

- Dévissez le couvercle du compartiment avec un tournevis, tournez le verrou et retirez le couvercle (figure 1).
- Branchez la batterie rechargeable au connecteur d'alimentation XT30 du camion, puis placez-la dans le compartiment (figure 2).
- Remplacez le couvercle, revissez-le et refermez le verrou (figure 3).

Charger la batterie Li-ion

Branchez le **connecteur blanc** de la batterie sur la prise du chargeur USB fourni, dans le bon sens et sans forcer. Branchez ensuite la fiche USB à une alimentation adaptée. Le dessin distingue le branchement autorisé de celui qui est interdit : ne chargez pas via la prise noire XT30.

Indications imprimées : batterie Li-ion 7,4 V / 2 000 mAh (type 18650) ; chargeur d'équilibrage USB avec protection contre la surcharge ; entrée 5 V, 1 à 2 A ; sortie 4,2 V / 800 mA × 2. La durée annoncée est de **5 à 7 heures**.

Voyants : rouge fixe lorsque la batterie n'est pas en charge ; rouge fixe et vert clignotant pendant la charge ; rouge et vert fixes à la fin. Débranchez le chargeur lorsque la batterie est chargée.

Piles de la radiocommande

Dévissez le couvercle du compartiment (figure 1), insérez **quatre piles AA de 1,5 V non rechargeables** en respectant les polarités indiquées (figure 2), puis refermez et resserrez la vis (figure 3).

Repères de la radiocommande

Voyant d'alimentation ; manche gauche pour la marche avant/arrière ; manche droit pour la direction et la benne ; réglages fins de direction gauche et droit ; boutons son et éclairage ; interrupteur marche/arrêt. Le schéma d'origine permet de repérer chacun de ces éléments.

Mise en route et fonctions

Le système fonctionne en **2,4 GHz**. Allumez le camion et la radiocommande, puis attendez l'appairage automatique. Un bip du véhicule confirme la liaison. Appuyez sur le bouton du son pour l'activer ou le désactiver ; procédez de la même manière avec le bouton d'éclairage.

Conduite : poussez le manche gauche pour avancer ; tirez-le pour reculer. Poussez le manche droit vers la gauche ou la droite pour tourner. Poussez le manche droit vers le haut pour relever la benne, et tirez-le vers le bas pour l'abaisser.

Correction de trajectoire : si le camion dévie alors que vous voulez rouler droit, utilisez le bouton de réglage fin correspondant. S'il tire vers la gauche, corrigez la direction vers la droite ; s'il tire vers la droite, corrigez vers la gauche. Faites de petites corrections successives.

Sécurité et entretien des batteries

- Produit comportant de petites pièces : risque de blessure ou d'étouffement. L'âge indiqué sur la couverture est de **8 ans et plus**. Confiez le changement des piles et la recharge à un adulte.
- Ne mélangez pas piles rechargeables et non rechargeables, ni piles neuves et usagées, ou de capacités différentes. Ne rechargez pas des piles sèches ; respectez la polarité.
- Ne laissez jamais une batterie en charge sans surveillance. Une batterie défectueuse doit être déposée dans un point de collecte adapté.
- Ne démontez ou ne modifiez pas le produit. Évitez les chutes et l'humidité.

Conformité et recyclage

AMEWI Trade e.K. déclare le produit conforme aux dispositions applicables de la directive 2014/53/UE (RED).
Déclaration complète : <https://amewi.com/Konformitaetserklaerungen>. AMEWI Trade e.K., Nikolaus-Otto-Str. 18, 33178 Borcheln, Allemagne.

Ne jetez ni l'appareil ni ses piles et batteries avec les déchets ménagers. Utilisez les points de collecte prévus pour les équipements électriques et les batteries. Cd, Hg et Pb signalent respectivement le cadmium, le mercure et le plomb. Le fabricant mentionne la conformité RoHS et la collecte des emballages par le système Landbell.

Note sur la source : la couverture indique deux batteries alors que la procédure d'installation montre un seul compartiment et une seule batterie. Vérifiez le contenu effectif de votre boîte avant utilisation.

Panneau d'origine 1 - Conformité et avertissements

Declaration of Conformity

This product has been manufactured according to actual technical standards. The product is matching the requirements of the existing european and national guidelines. The Declaration of Conformity has been proofed. AMEWI Trade e.K. declares that this product is matching the basic requirements and remaining regulations of the guideline 2014/53/EU (RED). The declarations and documents are stored at the manufacturer and can be requested and applied there.

The full text of the declaration of conformity can be found at: <https://amewi.com/Konformitaetserklaerungen>

For additional questions to the product and conformity please contact:

Amewi Trade e.K. Nikolaus-Otto-Str. 18, 33178 Borcheln or via the website amewi.com



Security and Hazard Warnings



Attention! For damage, caused by disregarding of the manual, warranty expires !

We are not liable for secondary failures, material or personal damage, caused by improper usage or disregarding the security notices.

Attention! Based on security and registration (CE) reasons, it is forbidden to modify the product personally. Do not disassemble the product.

Attention! Small parts. Danger of suffocation or risk of injury caused by small parts.



Even a drop down from a small height can cause damage to the product. Usage of more then one Products of same Frequency at the same time is not possible, because it will affect each other.

Battery Notice and Battery Disposal



Attention! Battery do not belong in childrens hands. A change of the battery has to be done by an adult person. Never mix chargable batteries with non-chargeable batteries. Never mix fully charged batteries with almost empty batteries. Never mix batteries of different capacities. Never try to charge dry batteries. Take care of the correct polarity. Defective batteries belong to special waste. Never leave a charging battery unattended. For questions about the charging time please read the manual or ask the manufacturer.

Disposal



The company AMEWI is registered below the WEEE Reg. Nr. DE93834722 at the foundation EAR and recycles all used electronic parts properly. Electric and electronical products are not allowed to put in household garbage. Please dispose the product at the end of the lifetime accroding to the actual laws. You as a customer are responsible by law for the return of all used batteries, a disposal over the household garbage is forbidden !

Batteries containing hazardous substances are marked with the alongside symbols, which point to the prohibition of disposal in household garbage.

Additional notations for the critical heavy metal are: Cd=Cadmium, Hg=Quecksilver, Pb=lead (Label is placed on the batteries, for example below the bottom left trash symbols).



Based on RoHS labeling the manufacturer confirms, that all limit values were taken care of at the time of manufacturing.



Batteries labeled with the recycling symbol can be put into used battery collecting tank. (Most supermarkets have)

They are not allowed to be put into local household garbage.

 


AMEWI Trade e.K. is involved in the dual system for boxing over the company Firma Landbell AG. All used boxes are collected from partner companies (waste disposal contractor) at private customers (local household), sorted and properly utilized. The Involvement in a Dual Systems helps to save CO² Emissions.


Panneau d'origine 2 - Installation de la batterie

Installation of setting battery in truck


1. Loosen screw of battery cover by screwdriver, twist the buckle and take out battery cover.(Pic .1)

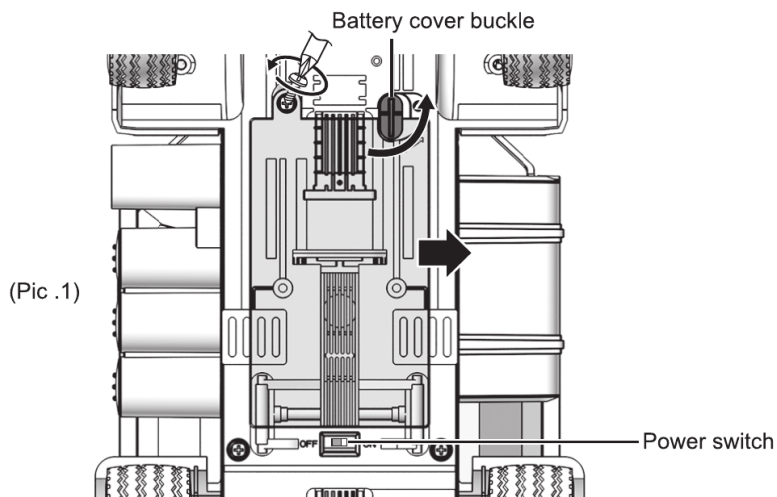

 2. Connect rechargeable battery with power port of truck, then put it into the battery box.(Pic .2)

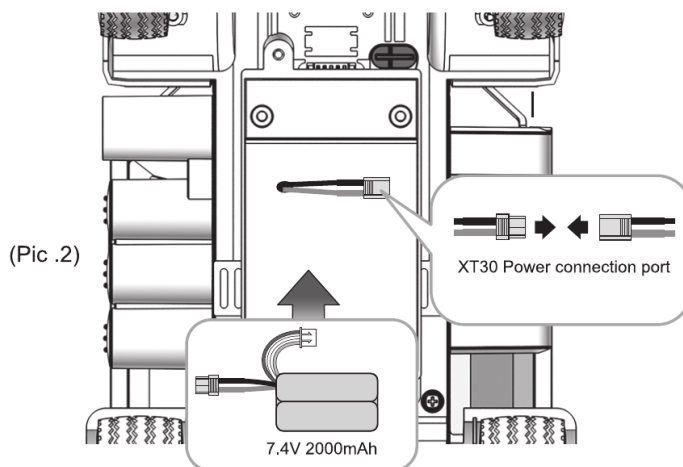

 
3. Install the battery cover, tighten the screw and twist the buckle back.(Pic .3)

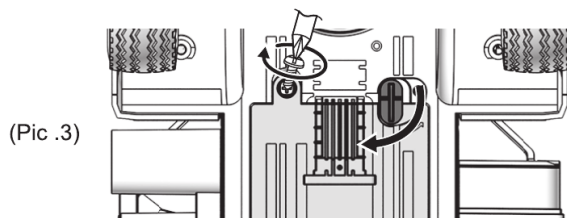

BATTERY CHARGING INSTRUCTIONS

CHARGING METHODS

 Connect the white port of Li-Ion to USB charging port, as shown in the Figure, and ensure port can be connected tightly and correctly, then insert the USB charging plug into power adapter, and perform charging.

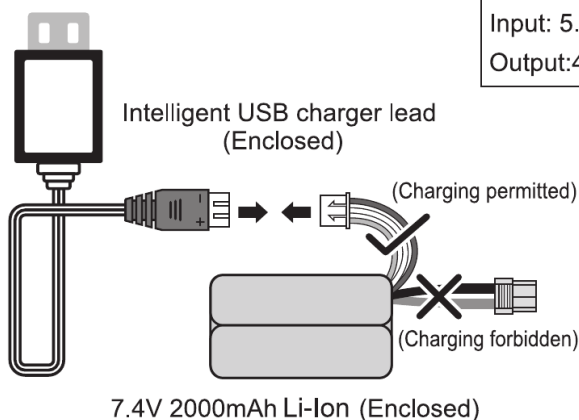

BATTERY/USB PARAMETERS

Battery specifications: 18650
7.4V 2000mAh

Intelligent USB balance charger with overcharge protection

Input: 5.0V 1-2A

Output: 4.2V 800mAh X2

INDICATOR LIGHT STATUS AT THE TIME OF CHARGING:

Uncharged state: red light always lit

Charged state:

Red light always lit + Green light flashes

Full charging state:

 
Red and green light always lit

Charging period: 5-7 hours

When battery is charged, please pull off the USB charger lead in time.


Installation of Remote Control Battery

1. Loosen the screw of battery cover by screwdriver and take out battery cover. (Pic .1)
2. Put four 1.5V "AA" non-rechargeable batteries (batteries need to be purchased separately) into the battery box to the right polarity at the bottom of remote control. (Pic .2)
3. Install the battery cover and tighten the screw. (Pic .3)

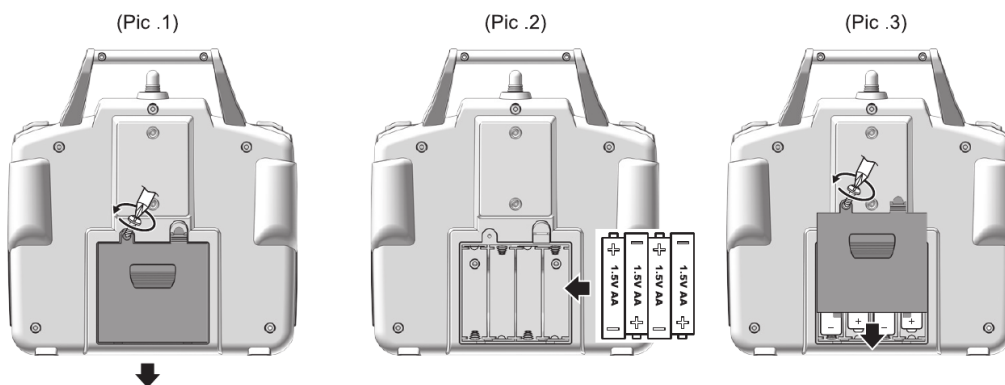

ATTENTION: Batteries shall be put to the right polarity.

 
Operation of remote control

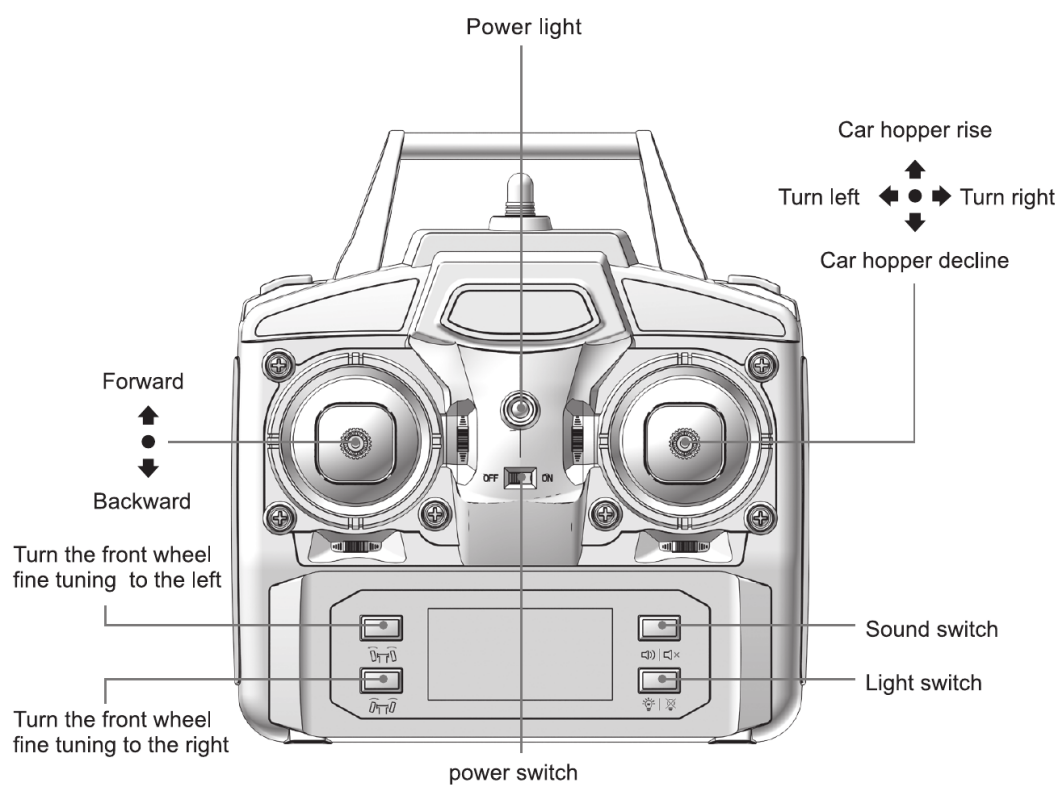

Panneau d'origine 5 - Appairage et réglages

The match of R/C frequency and power on

 This product is controlled by the frequency of 2.4GHz. When playing it at the first time, please turn on the power and wait for the automatically matching of frequency. The sound -"beeps" given by the product indicates that the frequency is matched successfully.



Control of light and sound



 
Press this button to turn on the sound, and press once more to turn it off.




Press this button to turn on the light, and press once more to turn it off.

The operation of front wheel


When the car can't go straightly, please control the wheel to the left or right fine tuning.

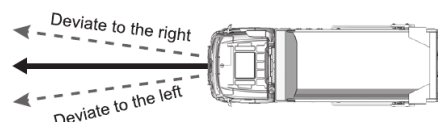



Rectification of deviation to the left

 

The truck deviate to the left

 


  Press this button, and the rear wheels will turn right lightly.

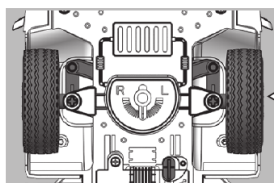
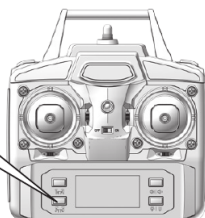


Rectification of deviation to the right

 
The truck deviate to the right



  Press this button, and the rear wheels will turn left lightly.

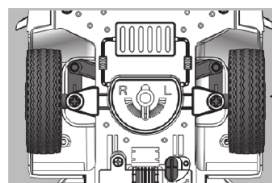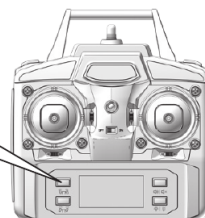

Operation of playing the truck

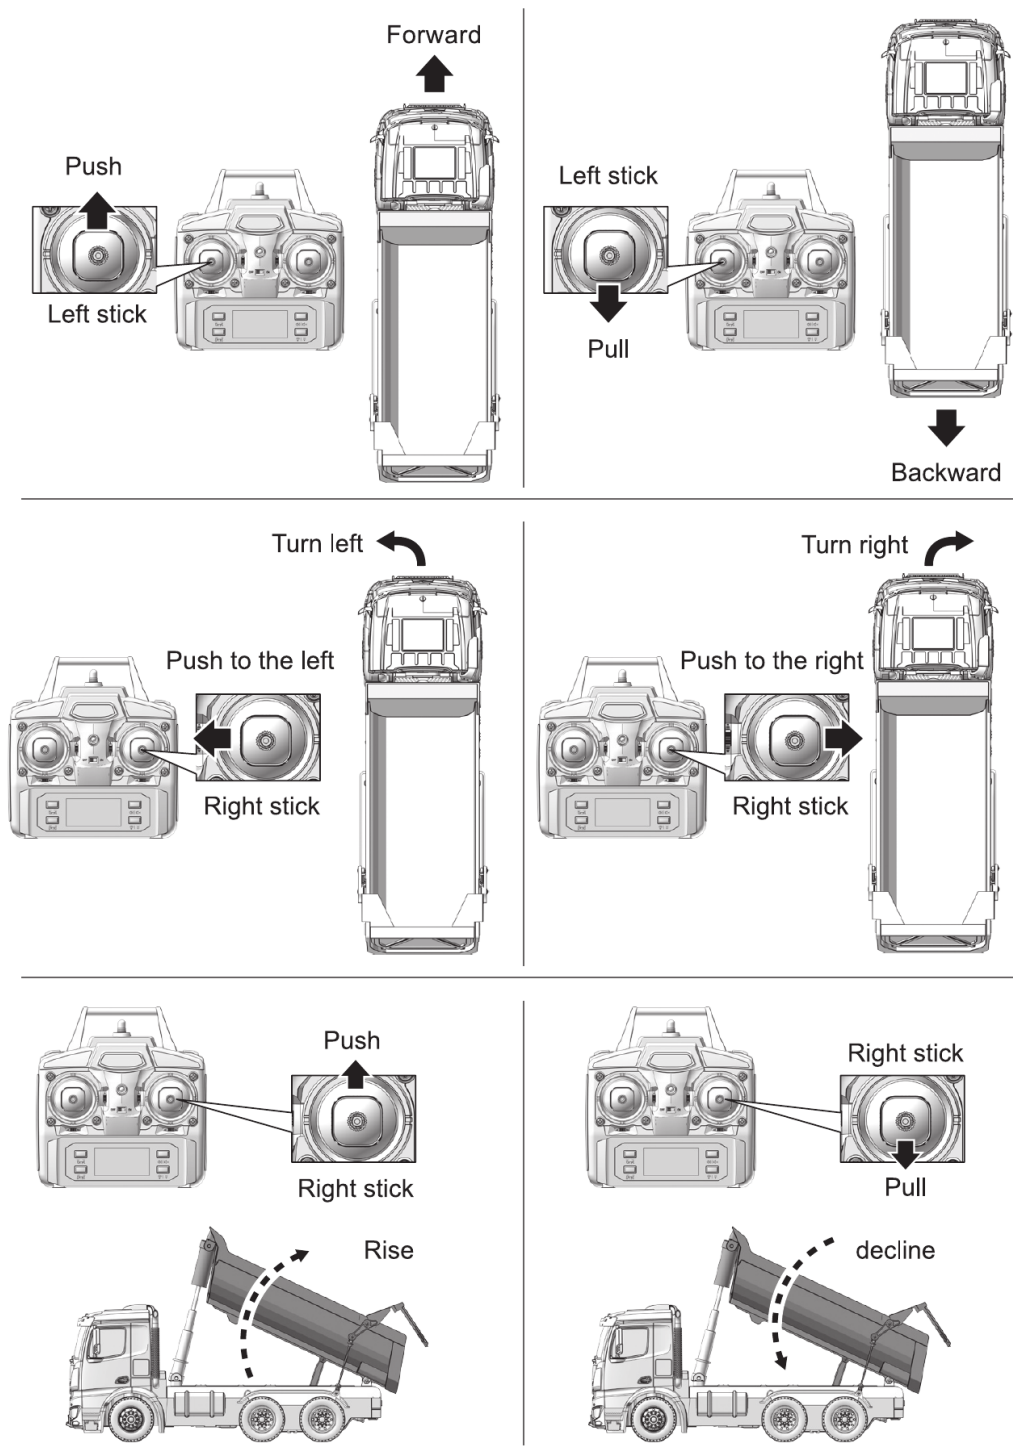 

6